

LABO ★ K EFFECTS

MISS DIRTY



CONTENTS

CONTENTS	2
TECHNICAL INFO	3
OVERVIEW	4
CONTROLS	5
POWER SUPPLY	6
POWER-LINK SYSTEM	7
ADVICES	9
TROUBLESHOOTING	10
RECALL SHEET	11

LABO ★ K EFFECTS

TECHNICAL INFO

CONTROLS

- Output level (Volume)
- Dust (Low Octave)
- Saturation (Drive)

TECHNOLOGY

- Selected components
- Robust diecast enclosure
- Cliff et Lumberg connectors

SPECIFICATIONS

- True Bypass 3PDT switch.
- Consumption 4mA.
- Power: 9V battery or AC adapter DC 9V (not included).
- Dimensions : 4.7 (W) x 3.7 (D) x 1.6 (H)
- Weight: 13.40 Once.

Use quality mono Jacks cords only.

OVERVIEW

The Miss Dirty is a particular effect combining a saturation stage and a bass octave effect giving a dirty sound. The grain of the saturation is unique and reminds its synthetic moog.

It has a volume control, an adjustment of the amount of octave and a drive. It has a volume control, an adjustment of the amount of octave and a setting drive.

Like all **Labo ★ K Effects** pedals, the Miss Dirty is True By Pass. It means that when the effect is not active, the device is completely disconnected from the path of the signal and thus adds none résistive load in this one (The accumulation of résistives loads on the path of the signal eventually decreases the power and the brightness of the sound)

Optionals accessories

Power-Link cord by **Labo ★ K Effects**

Allows to chain the supply of several pedals from a single power supply using the specific cord. (supplied with each Miss Dirty)



Knobs for **Labo ★ K Effects** pedals.



I – THE POTENTIOMETERS

1. Volume

This control adjusts the output level of the Miss Dirty.

2. Dust

Dust is the amount of « dirty » sound.

3. Drive

This setting is the percentage of signal saturation

POWER SUPPLY

Labo ★ K Effects pedals are powered by 9V DC battery or external power adapter using the « Boss™ » standard (negative (-) in the center, positive (+) outside).



The pedal can be supplied in several ways:


- 9V internal battery.
- AC Power adapter.
- AC Power adapter from another **Labo ★ K Effects** via « Power-Link » cord.
- 9V battery from another **Labo ★ K Effects** pedal via « Power-Link » cord.

Notes :

The power consumption of the Miss Dirty is 4mA what gives internal battery a comfortable lifetime.

When the input jack is not pressed, the internal battery is disconnected.

Change of the internal battery is done by unscrewing the four screws on the bottom of the box.

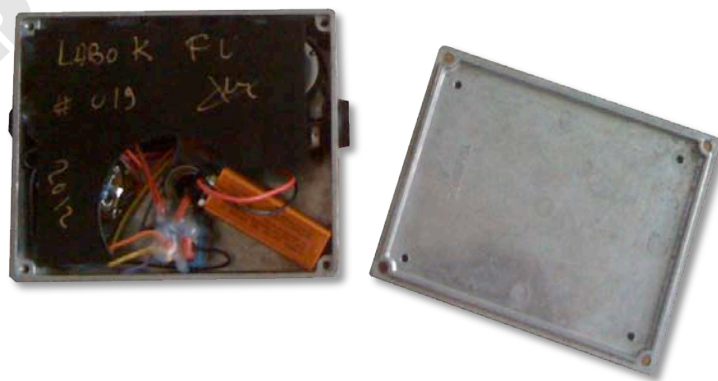

POWER-LINK SYSTEM



The Power-Link system of **Labo ★ K Effects** allows an external power supply to power several **Labo ★ K Effects** pedals via the cable supplied with each pedal by creating a daisy chain.

Using the Power-Link system of **Labo ★ K Effects** it is even possible to power a **Labo ★ K Effects** pedal (or any other pedal using the same power standard) with the internal battery of a **Labo ★ K Effects** pedal.

The amperage of the power supply used must be higher than the total consumption of pedals you want to feed simultaneously.

To respect the sense of connection, the Power-Link system uses 2 different connectors.


Lumberg connector J21 for the input.



Lumberg connector J25 for the output.



USE OF THE POWER-LINK CORD

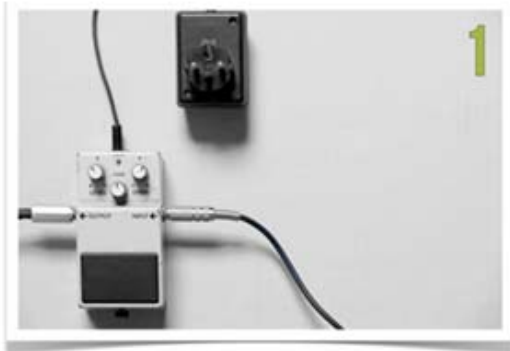

BRANCHEMENT TYPIQUE D'UNE ALIMENTATION EXTERNE



AJOUT D'UNE PEDALE LABO ★ K



BRANCHEMENT DE LA GUITARE SUR LA LABO ★ K



INTERCONNEXION DES DEUX PEDALES



ALIMENTATION EXTERNE DANS LE CONNECTEUR "IN"
DE LA LABO ★ K



ALIMENTATION DE LA DEUXIEME PEDALE AVEC
LE CORDON POWER-LINK



POSSIBILITE D'UTILISER LA PILE INTERNE DE LA LABO ★ K POUR ALIMENTER UNE 2EME PEDALE VIA LE
CORDON POWER-LINK

ADVICES

To keep the integrity of the sound, use good quality mono Jack cords exclusively.

To extend the life of the battery, remove the connector of the input jack when not using the device.

Replace the battery when the light shines only weakly or not at all during the use.

If an external adapter is exclusively used, it is recommended to remove the internal battery.

LABO ★ K EFFECTS

STAGE 1

No sound comes out of the device:

- Verify that all your equipment works without the pedal.
- Insert the pedal into the chain.
- If the sound comes out in by pass mode, go directly to the stage 2.

If the sound does not comes out either in by pass mode, nor in effect mode, go directly to the stage 4

STAGE 2

No audio ouput when the device is switched on :

- Verify that the output volume is not in zero position.
- · If the light shines correctly go to the stage 4.

STAGE 3

If the light shines weakly or not at all and the sound is weak and very distorted:

- Change the battery or verify the connection of the power cable.

STAGE 4

Your device is broken:

- Contact **Labo ★ K Effects** by mail

RECALL SHEET

MISS DIRTY - RECALL SHEET BY LABO ★ K EFFECTS

